


Change the server address of WIFI Module

1, Use Mobile PC or Phone connect to the WIFI module AP whose SSID is the module serial number. The default password is 12345678.

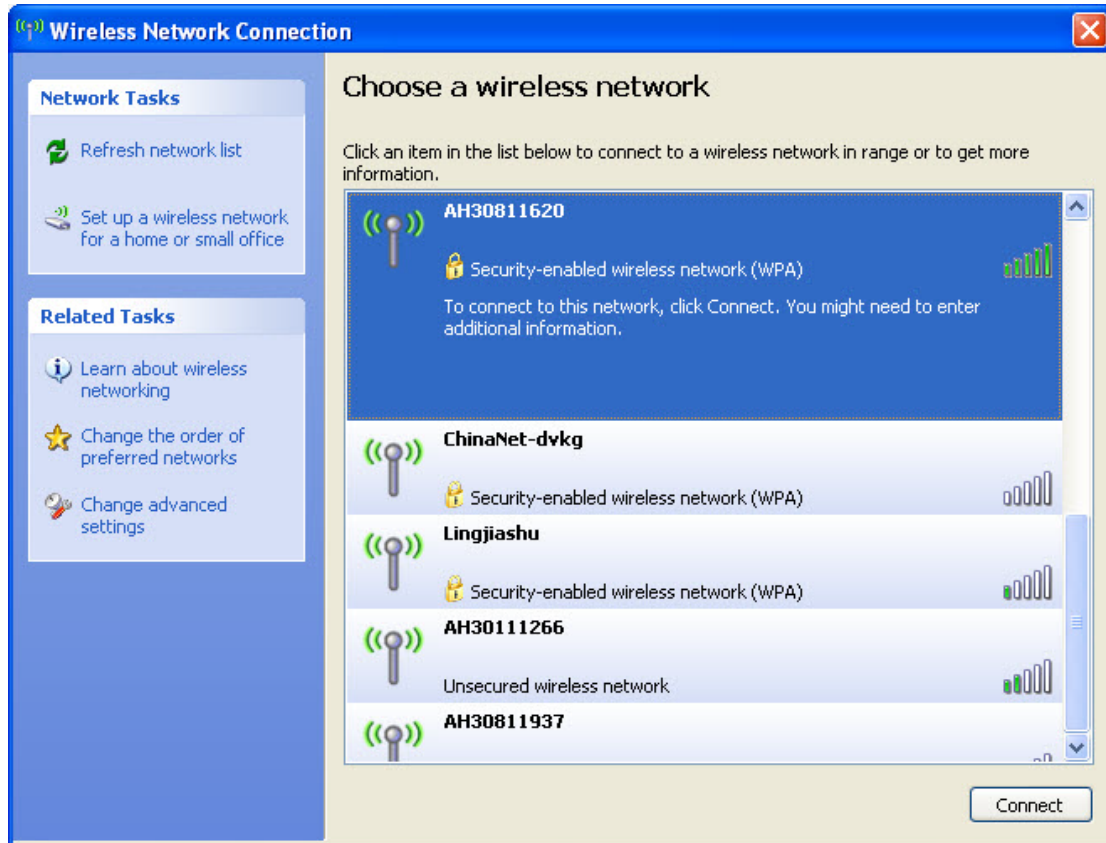

2, use browser visit 192.168.10.100, login info is admin/admin



3, select the "" on the left menu bar.

中文 English

STA Interface Setting

STA Interface Parameters	
AP's SSID	TP-Mencius <input type="button" value="Search"/> <input type="button" value="Clear"/>
Security Mode	WPA2PSK
Encryption Type	AES
Pass Phrase(8-32 Characters)	grt12345
Connection State	Connected
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

DHCP Mode	
MAC	AC-CF-23-02-C4-C5
WAN Connection Type	DHCP(Auto config)
IP Address	192.168.8.101
Subnet Mask	255.255.255.0
Default Gateway	192.168.8.1
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Network Setting	
Server Address(IP Address or Domain Name)	192.168.3.124
Server Connection State	Connected
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

4, Input "server.growatt.com" in the server address bar.

Network Setting	
Server Address(IP Address or Domain Name)	server.growatt.com
Server Connection State	Connected
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

5, Apply the change, and restart the wifi module.

Set Successfully, Restart to use new setting.

6, long in "server.growatt.com", check the device's connection.

